

mondo


new MONDO



simplicity

 **Electrolux**



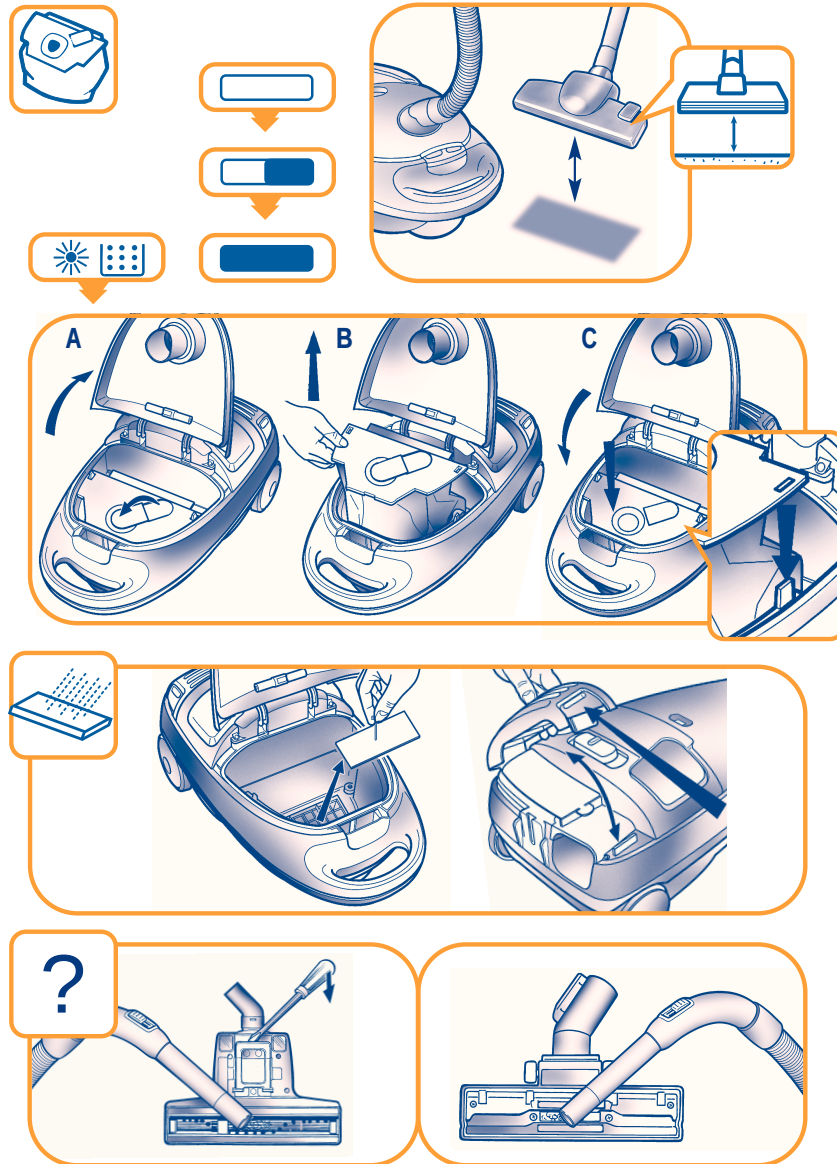

Thank you for choosing an Electrolux Mondo. To ensure total satisfaction, read this Instruction book carefully. Retain for reference.

These Operating Instructions cover all Mondo models. This means that with your specific model, some accessories may not be included.

Before you start, please refer to electrical safety supply instructions on page 54 (U.K. and Ireland only).

Electrolux supply a range of cleaners with different specifications and accessories. Please refer to your model number whilst reading this booklet.



Tools for your Mondo



Dust bags



Extension tubes (x2)



Telescopic tube



Swivel hose and handle with manual suction control



Combination carpet/hard floor nozzle



Turbo nozzle



Narrow crevice nozzle



Upholstery nozzle



Dusting brush



Small tool holder



Large tool holder



Ensuring your safety

The Electrolux Mondo is for domestic use only and has been designed to ensure maximum safety and performance. Please follow these simple precautions:



The Mondo is double-insulated so it must not be earthed

- ① The Mondo is only to be used by adults. Young children or infirm persons should be supervised to ensure that they do not play with the appliance



Always store in a dry place



Do not use to pick up liquids



Avoid sharp objects



Do not pick up hot cinders or lighted cigarette ends



Do not use near flammable gases



Avoid tugging on the mains cable and check cable regularly for damage



Note: Do not use your cleaner with a damaged cable. If damaged the cable should be replaced at an Electrolux Service Centre



The Plug must be removed from the socket-outlet before cleaning or maintaining the appliance



All service and repairs must be carried out by authorised Electrolux service staff

For Aust/NZ: We recommend you do not use your vacuum on carpet cleaning foams or to clean up building materials including 'gib' or plaster dust. They could damage consumable items or key parts and components in your vacuum and render your warranty invalid.



Getting Started

- Check the dust bag is in place.
- Insert the hose until the catches click to engage. (Press catches inwards to release).
- Attach tubes or telescopic tube to the hose handle and floor nozzle by pushing and twisting together. (Twist and pull apart to dismantle).
- Extend the cable and connect to mains. Mondo is fitted with cable rewind, ensure cable is not twisted before use.

(Press foot pedal to rewind. **Note: Please hold the plug to prevent it striking you or the machine).**

- Press the On/Off foot pedal to activate the cleaner.
- To reduce suction, gradually open the aperture on the hose handle. Slide the electronic suction control between 'MAX' and 'MIN' / press the '+/-' foot pedal.



Your Mondo features

A  Mains cable

B  Cable rewind pedal

C  Electronic suction control

D  Steptronic suction control

E  Electronic dust bag indicator

F  Power outlet (for the use of power driven tools)

G  Mechanical dust bag indicator

H  Hose connection

I  Dust bag security device – prevents lid closing without a dust bag in place

J  Carrying handle

K  Cover release catch for dust bag compartment

L  On/off switch

M  Storage slot for floor nozzle and extension tubes when in use

N  Storage slot for floor nozzle and extension tubes when not in use

O  Tool holder (for attachment to hose handle or extension tube) with slot for wall mounting

P  Tool holder (for attachment to hose handle)



Getting the best results



Carpets: Use the floor nozzle with the lever in this position. Use the Turbo nozzle which is ideal for picking up hair and fibres and for grooming your carpet.



Hard floors: Use the floor nozzle with the lever in this position.



Loose rugs/curtains/lightweight fabrics: Reduce the suction power. Use the floor nozzle for loose rugs and the upholstery nozzle for curtains, cushions etc.



Lamps, pictures and bookshelves: Use the dusting brush.



Confined areas: Use the crevice nozzle for crevices, corners and radiators.



Dust bag indicator and changing the dust bag

For peak performance the dust bag must be changed when full. If the dust bag should accidentally get broken in the cleaner, take cleaner to an Electrolux Service Centre for cleaning. Check the dust bag regularly and replace when necessary. The dust bag indicator window will gradually turn red when filling and completely red when full / the electronic indicator will flash every half second when full.



To check the dust bag, the cleaner must be switched on, with all attachments connected and off the floor.

The dust bag full indicator may signify that the bag is blocked (occasionally caused by very fine dust) which will cause loss of suction and may result in overheating. If this occurs change the dust bag even if it is not full.

To change the dust bag:

- Release catch and swing back lid before removing the dust bag, bend the tab into the hole to prevent dust escaping.
- Remove the dust bag.
- Insert new dust bag by fitting the bag slots over holders.

We recommend the dust bag is changed:

- * after using a carpet cleaning powder
- * if there is a bad smell from the cleaner, then you should also change the filter

Note: Use only Electrolux original dust bags and filters (ref E44)



Dust bag safety device

To avoid damaging the cleaner do not use it without a dust bag. A safety device is fitted which prevents the cover closing without a dust bag. Do not attempt to force cover shut.



Changing the filters

These should be changed with every fifth dust bag. Never use the cleaner without the motor protection filter.

To change filters:

- Lift lid, remove dust bag and filter.
- Insert new filter, replace dust bag and close. Mondo also has exhaust filters.

To change it:

- Lift rear grill and remove filter.
- Insert new filter and replace grill.



Troubleshooting

1. Power: If the electric power does not come on, **disconnect from mains** and check plugs, cable and fuses where appropriate.

2. Blockages/dirty filters: The cleaner may switch itself off in the event of a severe blockage or excessively dirty filter(s). In such cases, disconnect from mains and allow to cool for 20-30 minutes. Clear blockage and/or replace filter(s) and restart.

The clearing of blocked hoses is not covered by the guarantee. To avoid blockages and maintain suction efficiency, the floor nozzles should be cleaned regularly using the hose handle. **Disconnect from mains** and check the turbo nozzle for threads entangled in the brush roller. Remove by snipping threads with scissors taking care not to cut the bristles.

Please also see Electrolux additional information towards the back of this booklet.

3. Water: If water is sucked into the cleaner the motor must be changed at an Electrolux Service Centre.

If you have any comments on the cleaner or the Instructions for use Booklet please e-mail us on: floorcare@electrolux.se

Electrical supply (UK and Ireland only)

Before you start ... check the voltage

Before connecting the cleaner to an electrical supply ensure that the voltage marked on the data plate (on the underside of the cleaner) is correct for your electrical supply. If it is not, do not use the cleaner but refer back to your dealer.

Connecting to your electricity supply

Permanently connected to the cleaner is a mains supply (2-core) cable fitted with a non-rewirable plug incorporating a 13A fuse. In the event of the fuse requiring replacement the fuse cover should be removed using a small screwdriver. The old fuse **MUST** be replaced by a 13A ASTA approved BS1362 fuse and the fuse cover must be replaced before the plug is used again. In the event of loss of the fuse cover, replacements can be obtained from your Electrolux dealer or Electricity Board and must be of the same colour as indicated by the coloured insert on the base of the plug.

If difficulty is experienced in obtaining a replacement, contact your nearest Electrolux Service Centre. (Please see the separate Electrolux Service Organisation leaflet).

In no circumstances must the plug be used without a correct fuse cover fitted.

If the plug that is fitted to your appliance is not suitable for your socket outlet, it must be cut off and the appropriate plug fitted. Remove the fuse from the cut off plug. The cut off plug should then be disposed

of to prevent the hazard of shocks in case it should be plugged into a 13 amp socket in another part of your home.

The wires in the mains cable of this appliance are coloured in accordance with the following code:

Blue: Neutral.

Brown: Live.


As the colours of the wires in the mains cable of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

If using a three-pin plug, do not make any connection to the terminal marked with the letter E or by the earth symbol  or coloured green or green-and-yellow. This cleaner is double insulated and no earth connection is necessary.

It is in your interest to ensure that the plug is correctly attached to the mains cable. In case of doubt, have it done by a qualified electrician, as Electrolux cannot regard the repair of faults on the plug connection as a service that can be given free of charge under the terms of the guarantee.

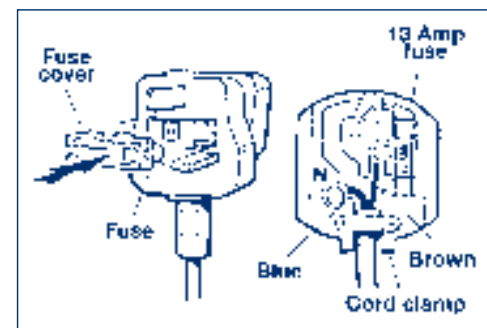

As a general guide to fitting any plug

- Ensure the lengths of wire inside the plug are prepared correctly.
- Connections should be firmly made after all conductor strands are entered into the terminal posts.
- When preparing the cable ends take care not to damage the outer sheath, or the insulation surrounding the inner conductors.
- Tighten all screws.
- Replace the top cover of the plug and secure.